

Instructions for use grease gun 400g (50022)



Before using grease gun carefully follow these instructions:

A. Filling with grease cartridge

1. Unscrew the discharge head from an empty tray.
2. Rod to pull the tray completely. At the end of the raised ring is stretched, in which the tapered rod. In the constriction rod to move the scale of the hole in the lid.
3. Remove the backing from the new cartridge with grease. If the inner edge of the deformed cartridges, align it.
4. Open the cartridge insert the end into the tank. Push the cartridge to the inside. Remove the cap from the cartridge.
5. Replace the discharge head, but turn it on only two turns, tighten it. Stem Slide the tapered hole and push it inwards tray.

IMPORTANT: If you will stay rod sticking up part (except the handle) from the tray bar patron ran their first break. Press down firmly on the handle rod to rod broke through the cartridge. Pump out the air from the tray. When the hole in the discharge head will pass through grease, pressure head screw the tray.


B. Filling the dispenser

1. Remove the cover from the mother adapter that screw to the discharge head and insert the adapter from the adapter into the filling pump oiler. Make sure that the size of the hole pump adapter and the adapter of grease gun.
2. Filling the pump connects to the adapter by pushing of grease gun and fine turning.
3. The grease gun hold firmly at the pump and pump the lever to push the grease into the grease gun.
4. Once the tank is filled, the valve will be fully withdrawn. Once you see the line on the rod, the tank is filled.
5. Gently shake to loosen the grease fitting from the dispenser. Backed push rod back into the tank.

NOTE: When filling always remove the cartridge from the magazine.

C. Manual filling

1. Remove the tray from the discharge head.
2. Rod to pull the tray completely. At the end of the raised ring is stretched, in which the tapered rod. In the constriction rod to move the scale of the hole in the lid. Now add the filling in the empty tray.
3. Replace the discharge head, but turn it on only two turns, tighten it. Stem Slide the tapered hole and push it inwards tray. Pump out the air from the tray. When the hole in the discharge head will pass through grease, pressure head, tighten the stack.

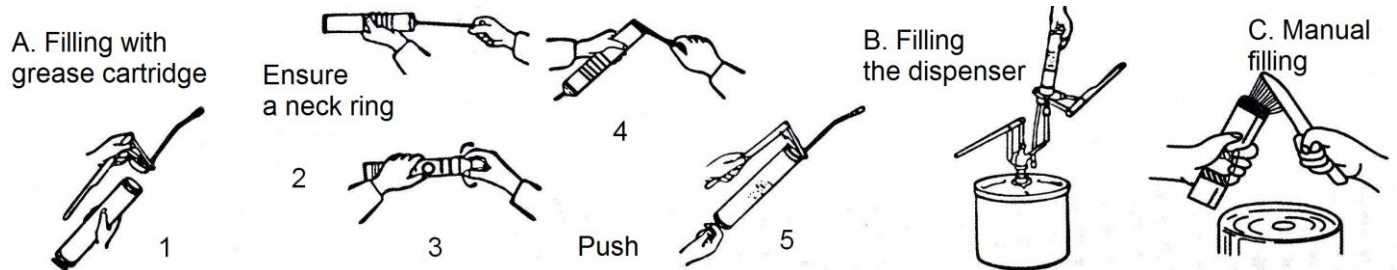

IMPORTANT:

1. If you use a cartridge with Vaseline, can reduce the flexibility and tightness compression rubber.
2. The moment you change the method of filling the dispenser or the performance of the direct fulfillment is normal for a small leakage of grease in the bottom of the tray.
3. To avoid the above phenomenon, consider the beginning, that way you will be the fulfillment of a long-term use. Do not change the established way of filling!!!

If you have problems with grease gun, it is due to the presence of air inside the container. To enable removal of air discharge head turning counterclockwise one turn. Then pull the rod completely and quickly push it back. This several times. Once released from the reservoir all the air, push rod completely back. Tighten the discharge head to the tank. Now is your grease gun ready to use.

We reserve the right to change specification and design without notice.

IMPORTER: LEVIOR s. r. o.